

# **TP9/TP10**

(9000LBS. FLOOR PLATE STANDARD)


## **INSTALLATION AND OPERATION MANUAL**

DATE INSTALLED: \_\_\_\_\_  
SERIAL # \_\_\_\_\_

(EAGLE)



Model TP-9  
Twin Post Lift

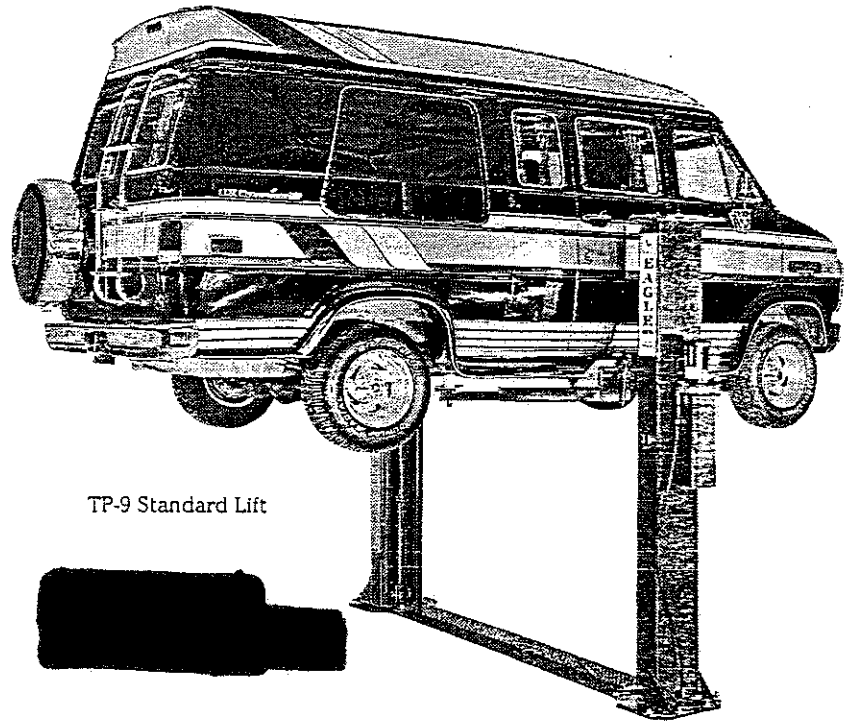

TP-9 Standard Lift

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016

Installation and  
Operation Manual



# Installation Manual Contents

## TP-9/10

*Parts Check List* 3

---

*Notes about your Eagle lift* 4

---

*Installation Instructions* 5-10

---

- Step 1 Measure lift area and check for defects
- Step 2 Cylinder assembly
- Step 3 Position and level columns
- Step 4 Install and adjust cables, hose and floor plate
- Step 5 Install anchor bolts and re-level columns
- Step 6 Install power unit and short hose
- Step 7 Install arms
- Step 8 Install spinup pads and check height adapters
- Step 9 Electrical hook-up
- Step 10 Test and adjust lift

*Operation* 11

---

Learn proper operation and recheck lift components

*Maintenance Schedule* 12

---

Please read and follow maintenance guide

*Troubleshooting Guide* 13

---

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual TP-9/10

## *Parts check list*

### IN COLUMN—

- 2 28'4" x 3/8" cables with four nuts and washers
- 2 2.5" x 36" pistons with rollers

### ON TOP—

- 1 power unit
- 1 "F" parts box
- 4 telescoping arms
- 1 floor plate

### IN PARTS BOX—

- 1 71" hose
- 1 111" hose
- 4 arm pivot pins
- 4 truck adapter
- 4 spinups
- 12 anchor bolts
- 1 catalog
- 1 small parts bag
- 1 TP-9 instruction/operation manual

### SMALL PARTS BAG—

- 1 6" pipe for piston
- 1 elbow w/ O-ring
- 1 90 F.M. elbow
- 2 straight fittings
- 4 5/16" nylock nuts
- 4 5/16" 18 nuts
- 4 5/16" x 1" hex bolts
- 15 shims
- 1 3/4" plug

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



## Important notes about your Eagle lift...

- ◆ Do not install this lift on any asphalt surface.
- ◆ Do not install this unit on any surface other than concrete conforming to minimum specifications.
- ◆ Do not install this lift over expansion joints or cracks. Check with building architect.
- ◆ Do not install this lift on a second floor with a basement beneath without written authorization from building architect.
- ◆ This lift is only as good as the floor you put it on. A good level floor is recommended for proper lift operation and installation. Cement should be minimum of 4" thick and 3,000 psi tensile strength with steel or fiber mesh reinforcement.
- ◆ The lift is intended to raise the entire body of the vehicle only. Do not attempt to lift only part of the vehicle. Improper use of this equipment could result in damage to the lift, yourself or other property.
- ◆ The lift is intended to lift vehicles only. It is not designed to lift any person or equipment containing persons.
- ◆ All persons using this equipment should be qualified, responsible persons and should follow the operation and safety guidelines set forth in this manual.
- ◆ For specifications on concrete pads, please call for technical assistance.
- ◆ Improper installation can cause damage or injury. Manufacturer will assume no liability for loss or damage of any kind, expressed or implied, resulting from improper installation or use of this product. Read the installation and operation manual in its entirety before attempting to install the lift.

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10

### Step 1: Measure lift area and check area for defects

The first step to any successful installation is to measure the bay for correct positioning of the lift. Measure the width of your doorway and divide it by two. This will give you the center of your doorway. Make a mark on the floor at the center of the doorway and measure from the side—wall to center mark. Note the distance and measure the same distance from the side wall at the front of the shop. Now snap a chalk line between the two marks—this is the center line for your lift.

Measure 69" from the center line to each side of the center line at front and rear of shop. Snap two more lines. These are your lift's outer dimensions (see figure 1).

**NOTE: If you have less than 4" between the wall and your outer dimension, you should move the lift over to allow for at least 4" of space. Eagle Equipment recommends 12" between the wall and the outer dimension, but where that is not possible, 4" is acceptable.**

Now find the length of the bay minus any work benches or other equipment and divide by two. For example, a 25' bay minus a 2' work bench equals a 23' bay. The center of the lift would be equal, at 11'6" from the garage door and the work bench. Draw a chalk line. Now measure 12" toward the garage door from the center line, this will be point "a". Measure 12" toward the work bench and mark this point "b". Measure diagonally from point "a" to the opposite side 140" and make a mark. This will be point "c". Measure from "b" in the same manner to find point "d". Mark a chalk line horizontally, from point "a" to point "d" and this will be your base line. (see figure 2).

**NOTE: You should have 24" between points "a" and "b" just as with "c" and "d". If not, find the center and adjust as necessary.**

Figure 1


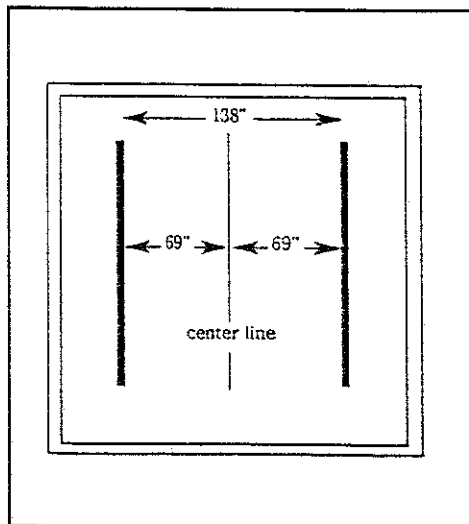


Figure 2



FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016

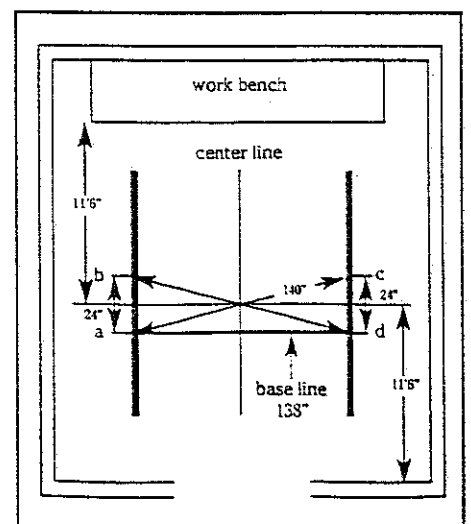

# Installation Manual

## TP-9/10


### Step 2: Cylinder Assembly

#### Power unit side

With the column laying on the ground, slide the carriage up far enough to place the cylinder into the column. Be sure one cylinder port faces the cut-out in the back of the column and the other faces up. Remove both the plastic (square head) and the iron (allen head) plugs. Remove the pin and spring flow restrictor assembly from the port. Install the straight fitting into the port facing up using teflon tape to insure a leak-proof seal. While guiding the chain over the roller, release the safety lock on the carriage and slide the carriage back down to the bottom of the column. Stand the column up and assemble the nipple and the elbow into the rear facing port using teflon tape. Be sure the elbow is facing up when tight. (see fig. 3)

#### Off-side

Remove only the plastic port plug (square head). Install cylinder following instructions above. With the column laying on the ground and the open port facing up, install the straight fitting into the cylinder port. While guiding the chain over the roller, release the safety lock on the carriage and slide the carriage back down the column. You are now ready to stand the column up.

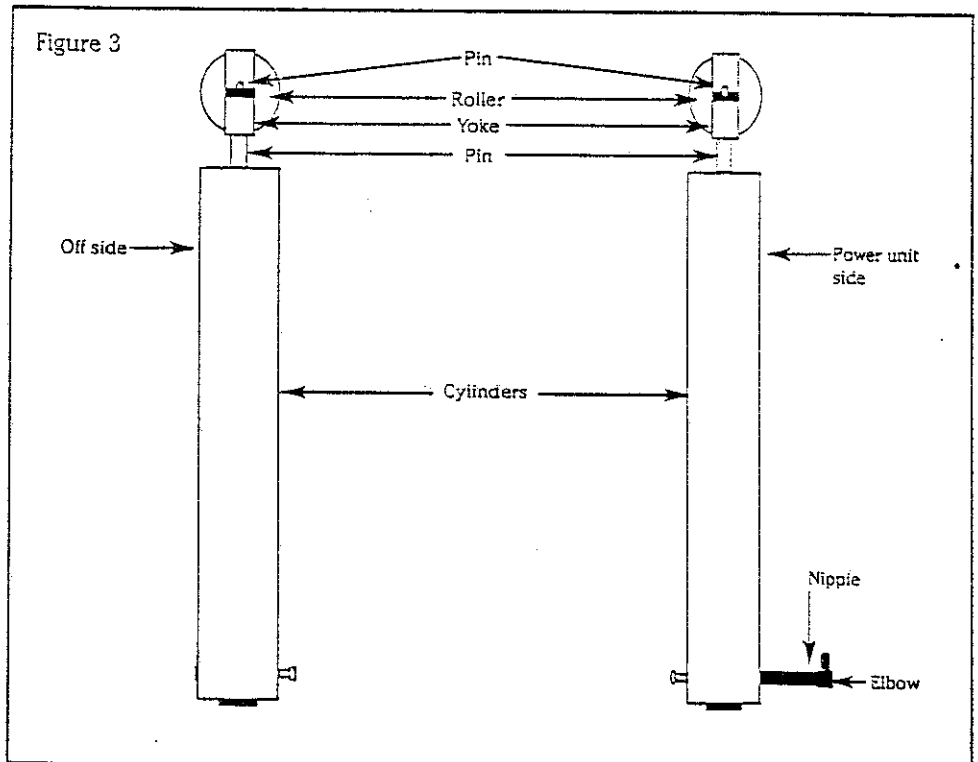

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10


### Step 3: Position and level columns

Examine the area where your lift is going. Check for large cracks in the floor, expansion joints and for overhead obstructions. If either column is going to sit across or on top of an expansion joint, you may need to move the lift to a different location.

**NOTE:** Bolt holes in the base plate should be at least 4" from any expansion joint or large rack. You will need at least 12' of unobstructed ceiling height.

Position the columns as shown in figure 3. We recommend placing the power unit on the passenger side for ease of operation. Using a four foot level, 3/4" flat washers and shims provided, shim the columns level, front-to-back and side-to-side.

Figure 3

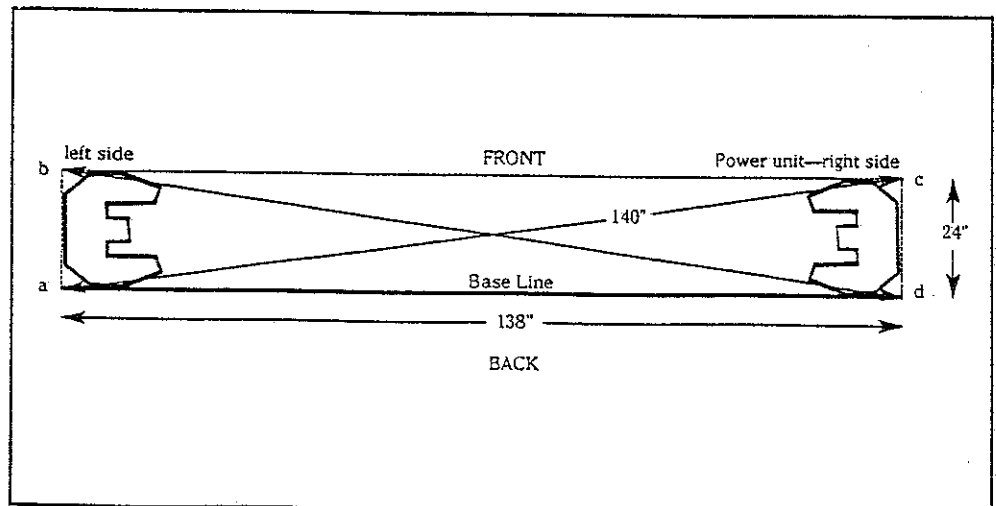

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016





# Installation Manual

## TP-9/10

### *Step 4: Install and adjust cables, hose and floor plate*

Using two people, a fork-lift or a shop crane, lift each carriage to the second or third lock. Allow each carriage to rest on the locks and measure each side to be sure they are at the same height. Unwrap the two large cables and separate them. Remove the four 3/4" lock nuts and four 3/4" thin flat washers. Place nuts and two flat washers on each carriage so they are easy to get at.

Grab an end of one of the cables and place it down into the right front hole on the carriage (if you are facing the open end of the left column, it's the hole to the right and closest to you). Drop the cable end to the floor, install a flat washer and a 3/4" nut on the end of the cable and tighten it about two thirds of the way. Pull the cable back out so the end rests in the hole. Now run the cable over the top pulley, down through the left rear corner of the carriage and under the lower left pulley. Next, go straight across to the other side under the pulley and back up into the back right hole. If more than two inches of threaded rod sticks up through the hole, go back on the other side and tighten the rod as needed. Install the opposite nut hand-tight for now. Use the same process to install the other cable. Connect the long hose (111") to the fitting at the base of each cylinder.

Place the floor plate over the cables and hose. Line up the holes on the floor plate with the holes in the base plates. You may need to hammer the columns in or out to get the holes to line up. Do not move them front to back; keep the columns even with the baseline. The floor plate holes must stay aligned with the base plate holes during anchor bolt installation.

***NOTE: Now is a good time to check everything—position of the lift, level of columns, etc. The next step is permanent!***

### *Step 5: Install anchor bolts and re-level columns*

You will need a rotary hammer with a 3/4" carbide masonry bit (most rental outlets carry them). Do not use a regular drill and bit!

Your floor must be a minimum of 4" thick and 2,400 psi concrete or better. Using your rotary hammer, drill twelve 3/4" holes. Drill through the floor and hammer the anchor bolts in half-way (install the nut and flat washer on the bolt before placing them into the hole).

***NOTE: Be careful not to move the columns when drilling. One way to avoid this is to drill the holes and place the bolts one-at-a-time and save the inside hole for last.***

Recheck the level of each column and place shims around or beside each bolt and wherever there is space. Hammer the anchor bolts all the way down. Using a torque wrench, tighten the anchor bolts to 120 pounds of torque. Recheck the level of the columns. If the columns are off, loosen the anchors and use a pry bar to tilt the columns and shim as needed. Retighten and check again. With all bolts tight and the columns as close to level as you can get, you will have a good solid installation and years of trouble-free service.

**FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016**



# Installation Manual

## TP-9/10

### *Step 6: Install power unit and short hose*

Unpack the power unit from the box and remove the wood shipping board. Inspect the unit for damage before continuing. Remove the plastic cap from the 3/8" port on the side of the pump and install the elbow fitting found in the parts box. Screw in the elbow until the O-ring touches the pump and the end is facing the bottom of the tank. Then use an 11/16" wrench to tighten the locking nut and assure a good seal. Next use a screwdriver to pry off the 1" plastic cap from the tank. Place a funnel in the hole and fill the tank with 3.5 gallons of AW32 hydraulic oil (NAPA part #760 is recommended). Locate the four 5/16" x 1" bolts, four nuts and four lock nuts in the parts box. Place the four bolts in the holes on the mounting plate on the column, then place the four nuts hand-tight onto the four bolts. Hang the power unit on the four bolts and put the four lock nuts in place to hold them. Tighten the four nuts first, then the lock nuts.

Unpack the short hose and connect one end to the fitting at the bottom of the column, then to the elbow fitting on the power unit.

*Check all fittings to be sure they are tight, to avoid leaks!*

### *Step 7: Install arms*

Using the swivel pins provided, mount the four swing arms onto the crosstubes of the carriages.

### *Step 8: Install spinup pads and check height adapters*

Screw the four spinup pads onto the arms and test to see if they screw up and down smoothly in the arm nut. Slip the four truck adapters over the pads to make sure they all fit. If you have one that doesn't fit, call the service line for a replacement.

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10

### *Step 9: Electrical Hook-up*

The electrical hook-up should be done by a certified electrician. The power unit requires 208-220 volts on a 20 amp circuit breaker. It is recommended that you install a means of shutting down the power in close proximity to the power unit (a twist lock plug hung from the motor will be sufficient). The motor is factory pre-wired for proper power and rotation.

### *Step 10: Test and Adjust Lift*

With the power properly hooked up and turned on, push the power button to raise the lift (the cylinders will take a little while to catch up with the chain, then the lift will begin to rise). Raise the lift as high as it will go. Pull the key ring located near the bottom of each carriage to release the safety locks. Locate the lowering handle on the power unit. Pull and hold handle until the lift goes all the way down to the floor. Continue holding handle for at least 30 seconds to allow any air to escape from the hydraulic system. Once the lift is fully down, it's a good idea to have someone push down on the cylinders while you hold out the lowering handle. This will force out any additional air pockets. You only need do this once.

Run the lift all the way up and down two more times. While running the lift, listen to the safeties clicking. Each side should click within one second of each other or simultaneously. If they are not clicking together, you can adjust the cables to compensate by either tightening the side that is clicking first or loosening the side that is clicking last. Remember not to over-tighten cables—they should be firm, much like a banjo string.

If one or both safeties are not clicking at all, you will need to adjust the safety locks. This can be done by raising the lift until you see a bolt attached to the safety latch through the hole in the side of the column. You will also see a bolt attached to the safety latch. Give the bolt one turn clockwise and run the lift up and down once again. Continue this process until the safety starts to work. If the safeties are locking as you lower the lift, you will need to turn the bolt counter-clockwise in the same manner.

If you are unable to adjust the safety locks, stop using the lift and call our technical support line at 800-535-0016.

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10

**Operation: Learn proper operation and recheck lift components**

Swing front arms to the front and the rear arms to the rear. Pull a car into the bay. A general rule of thumb is to stop the car with the center of the wheel base even with the center of the columns.

Swing the four arms under the vehicle and position the pads under the appropriate lifting spots. (If you are not sure of the proper lifting points, you should check the vehicle's service manual or contact the vehicle manufacturer.) Adjust the screw pads so they all hit their lift points at the same time. This will allow the car to be level when rising.

With the pads in their proper locations and no obstructions around the lift or vehicle, you may now press the button on the power unit to raise the vehicle.

Raise the vehicle so that the tires are only 6" off the ground. Walk to the back of the vehicle and push up and down on the bumper. The vehicle will rock, but should not at any time lose contact with the pads. If the vehicle is bouncing off the pads or feels at all unstable, you should lower it back to the ground and reposition the pads to balance the load. Repeat this process until the vehicle is completely stable.

When the vehicle is stable, you may raise the lift all the way to the top. Listen to safeties and adjust if necessary.

***The proper operation of the lift requires that any time you raise a vehicle to work on it, you must lower the lift onto the safety locks. This is done by raising the vehicle to the desired height and lowering the lift until it stops on the next available lock. To lower vehicle, you must first raise the lift 1/2", release the safeties by pulling the key ring located near the bottom of each carriage, then pull the lowering handle. If you wish to lower the lift halfway and resume working on the vehicle, you must lower the vehicle 6" below the desired height, raise the lift again to engage the locks and then lower the lift onto the locks.***

***Never work under or near the lift without the locks engaged—the pump is not intended to be a load-holding device. Not using the locks will result in premature failure of the cylinders, pump and cables—and can cause serious property damage or personal injury. Failure to heed this warning will result in immediate termination of your warranty.***

***If you are unable to get the locks to perform correctly, call our technical support line at 800-535-0016 immediately.***

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10

### *Maintenance*

Maintenance is the key to smooth, safe operation and longer life of your lift. Follow these guidelines on a regular basis to keep your lift running efficiently.

1. Your lift is only as good as the floor it is mounted on. Cracked or shallow concrete should be watched at all times. Although your floor may be thick enough according to manufacturers specs, cracks and shallow spots can cause bolts to loosen and pull out of the floor. **All anchor bolts should be checked and retightened at least once a month.** Loose anchor bolts and weak cement are the number one cause of lift failure!

2. **Grease all the corners of the columns where the carriages run up and down.** The grease will do more good if you periodically clean off the old grease to get rid of any grit. A thin film of grease works better than thick blobs.

3. **You should oil the chains on your lift at least twice a year** to keep them from rusting and freezing up. Thirty-weight motor oil or motorcycle chain lube will be sufficient.

4. **All of the pulleys on your lift should be sprayed with a light oil** such as WD-40 or similar lubricant, two to three times a year.

5. **You should check for cracked or warped parts regularly and re-tighten any loose bolts.**

6. **Cables are an important part of your lift.** They keep both sides running equal to the other, allowing the safeties to catch together. If one side of your lift is running ahead of the other, most likely it is time to adjust your cables. Follow this simple procedure:

- a. Raise the lift so the top of the carriage clears the chain and pulley.
- b. Notice the threaded rod and nut which stick out through the top of each carriage. These are your adjusting nuts.
- c. You will tighten the nut on the side that is lifting ahead of the other by holding the bottom of the threaded rod with a pair of vice-grips and turning the nut with a suitable wrench or socket.
- d. Run the lift up and down and determine if you need further adjustment. If so, repeat steps a through c.

***If at any time you're not sure of the safe operation of the lift, discontinue using it and call our technical support line for assistance.***

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016



# Installation Manual

## TP-9/10

### Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor won't run	<ol style="list-style-type: none"> <li>1. Fuse or circuit breaker.</li> <li>2. Incorrect voltage to motor.</li> <li>3. Wiring connections.</li> <li>4. Burned out micro switch.</li> <li>5. Burned out motor windings.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace blown fuse or reset circuit breaker.</li> <li>2. Supply correct voltage to motor.</li> <li>3. Check and repair or insulate all connections.</li> <li>4. Replace micro switch.</li> <li>5. Replace motor.</li> </ol>
Motor runs but won't raise lift	<ol style="list-style-type: none"> <li>1. Motor runs in reverse direction.</li> <li>2. Open lowering valve.</li> <li>3. Pump is sucking air.</li> <li>4. Suction tube is off of pump.</li> <li>5. Low oil level.</li> </ol>	<ol style="list-style-type: none"> <li>1. Change motor rotation by reversing motor.</li> <li>2. Repair or replace lowering valve.</li> <li>3. Tighten all suction line fittings.</li> <li>4. Replace suction tube.</li> <li>5. Top-off tank.</li> </ol>
Motor runs, raises lift, but not vehicle	<ol style="list-style-type: none"> <li>1. Motor is running on low voltage.</li> <li>2. Debris in lowering valve.</li> <li>3. Improper relief valve adjustment.</li> <li>4. Overloading of lift.</li> </ol>	<ol style="list-style-type: none"> <li>1. Supply correct voltage to motor.</li> <li>2. Clean lowering valve.</li> <li>3. Replace relief valve cartridge.</li> <li>4. Check vehicle weight or balance load properly.</li> </ol>
Lift settles down slowly	<ol style="list-style-type: none"> <li>1. Debris in check valve.</li> <li>2. Debris in lowering valve.</li> <li>3. External oil leaks.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean check valve.</li> <li>2. Clean lowering valve.</li> <li>3. Check for and repair any leaks.</li> </ol>
Lift goes up unevenly	<ol style="list-style-type: none"> <li>1. Equalizer cables not properly adjusted.</li> <li>2. Lift installed on uneven floor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust cables according to manual.</li> <li>2. Shim column (not more than 1/2") or adjust spin-up pads to compensate.</li> </ol>
Anchor bolts won't stay tight or are pulling out of floor	<ol style="list-style-type: none"> <li>1. Cement thickness/strength insufficient.</li> <li>2. Holes are too big for bolts.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove bad cement, pour new pad for lift per specs in manual.</li> <li>2. Relocate lift using the proper size drill bit, or pour anchoring cement into holes to secure bolts.</li> </ol>
Safety latches don't work	<ol style="list-style-type: none"> <li>1. Safety not adjusted properly</li> <li>2. Safety spring not connected.</li> <li>3. Flat washer bent too far, squeezing release cable.</li> <li>4. Safety latch is rusted or frozen.</li> </ol>	<ol style="list-style-type: none"> <li>1. Raise lift until safety adjusting bolt appears in window, adjust as needed.</li> <li>2. Reconnect safety spring.</li> <li>3. Blend flat washer away from release cable until it moves freely.</li> <li>4. Spray penetrating oil on latch and work the latch until it moves freely.</li> </ol>
Cylinder whines or chatters	<ol style="list-style-type: none"> <li>1. Dry or tight seal.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove cylinder vent and spray Dura-tube or teflon spray lube into cylinder.</li> </ol>
Oil squirts out of cylinder vent	<ol style="list-style-type: none"> <li>1. Bad seal.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace seal or cylinder.</li> </ol>

FOR TECH SUPPORT  
OR SERVICE CALL  
800-535-0016

# Eagle Equipment Service Memo

Phone 800-535-0016 Fax 800-590-9814

To: Eagle Equipment Model TP-9 Customers  
From: Fred Navas, Svc. Mngr.  
Date: 12/28/98

## Service Bulletin

Eagle Equipment now uses a flow restrictor in all of its' hydraulic cylinders. It is necessary in the TP-9 (floor plate model) to remove the flow restrictor from the power side cylinder and leave it in place in the off side cylinder. Leave the allen plug in the cylinder and install the hydraulic fitting in the cylinder port with the plastic plug.

If you have any questions please don't hesitate to call.

Thank you ,  
Fred Navas, Svc. Mngr.

Eagle List Cylinders

Power Side

